

20" SINGLE ROW LED LIGHT BAR

UNIVERSAL

BE20SW105W-H



TOOLS REQUIRED

- 5mm Allen Tool
- 13mm Socket & Wrench

SKILL LEVEL

- Novice/Intermediate
- 1 (you)

Little skill level required, you can easily install it by yourself.

TIME REQUIRED

- 1 Hour

Time to install this should only take about an hour

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (2) M8x15mm Bolts
- (2) M8x30mm Bolts
- (2) M8 Flat Washers
- (6) M8 Split Washers
- (2) M8x25 Hex Bolts
- (2) M8 Nuts



STEP 1 | The DV8 7" round LED light comes with an 4 pin Deutsch plug connector that allows you to wire the LED light to your liking.


The White or Amber halo light will turn off when main light is activated.

White wire = White Halo
Yellow wire = Amber Halo
Black Wire = Ground
Red Wire = Power

Proper Wiring is necessary for safe usage.



STEP 2 | If planning to use the provided light brackets, use the (2) M8x15mm allen head bolts and a #5 allen tool to loosely secure the provided brackets onto the light bar as shown.

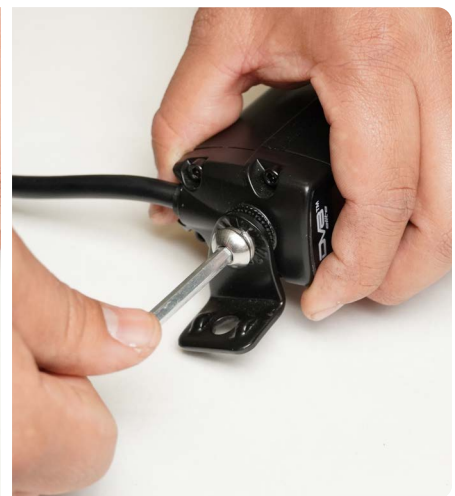



INSTALLATION MANUAL



STEP 3 | Lay the light bar onto your chosen light mount. Align the light bar bracket mounting holes as shown. Thread the provided M8 hex bolts through the light bar bracket and into your chosen mount.

Use (1) provided M8 nylon lock nut and (1) M8 flat washer per M8 hex bolt.

Use a 13mm socket and a 13mm wrench to secure the light bar bracket M8 hardware.

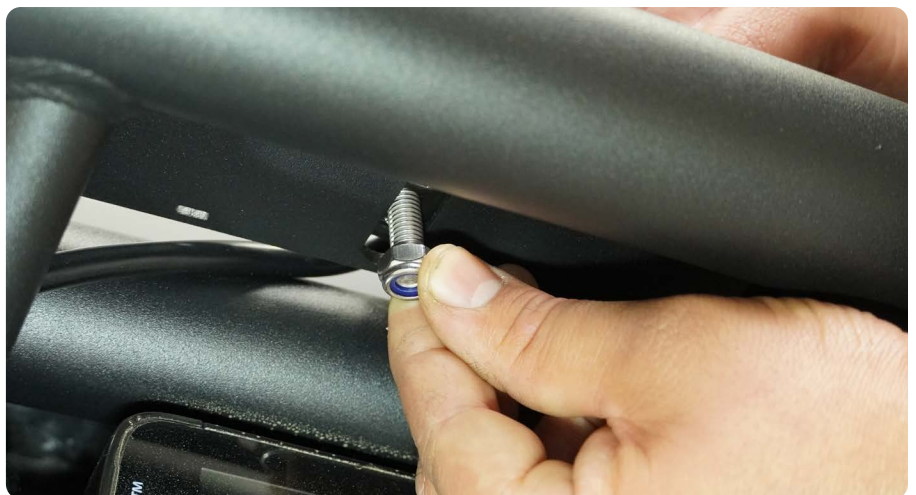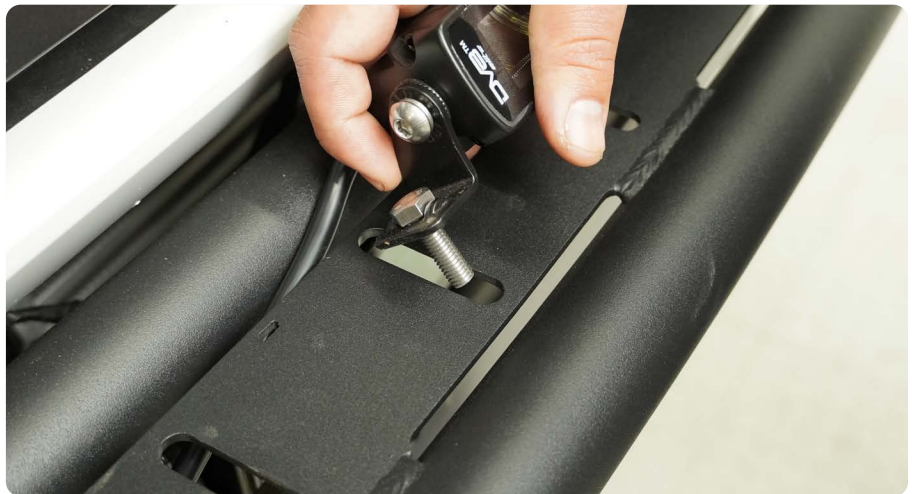

INSTALLATION MANUAL

STEP 4 | Double check that all hardware is secure.

Congratulations, installation of the DV8 Single Row 20" Elite LED light bar is now complete.

