

4RUNNER CENTER CONSOLE AND BRIDGE

2010+ (5TH GEN) TOYOTA 4RUNNER
CCT3-01



TOOLS REQUIRED

- 10mm Socket/Wrench
- #4 Allen Bit
- 11/32" Drill Bit/Step Bit
- Drill
- Short Phillips Head Screw Driver
- Plastic Trim Tool

SKILL LEVEL

- Novice/Intermediate
 - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 2 Hours
- Time to install this should only take about an two hours

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.

HARDWARE INCLUDED

- (12) M6x15mm Bolts
- (20) M6 Flat Washers
- (8) M6 Serrated Nuts



STEP 1 | Place the driver and passenger side mounts into place and line them up with the top of the center console trim.

Mark the mounting holes with a sharpie, once aligned.



INSTALLATION MANUAL

STEP 2 | Release the center console trim to access the wiring harnesses underneath.

Pull up on the center console on both sides to release the clips holding it in place. Use a trim piece removal tool if necessary.

Note: If you have a knob for the 4wd shifter, unscrew the handle by turning it counter clockwise to remove.



STEP 3 | Disconnect the two wiring harnesses under the center console by pressing on the release clips.

If you have a knob for the 4wd shifter instead of a dial there should only be one disconnection to make.






STEP 4 | Remove trim surrounding the heater and volume controls by pulling towards the rear of the vehicle to release the clips. Use a trim clip removal tool if necessary.

The vehicle we used has two different trim pieces, but some models have one large trim piece.





INSTALLATION MANUAL

STEP 5 | Use a 10mm wrench to remove the two bolts located on each side of the transmission shift knob.

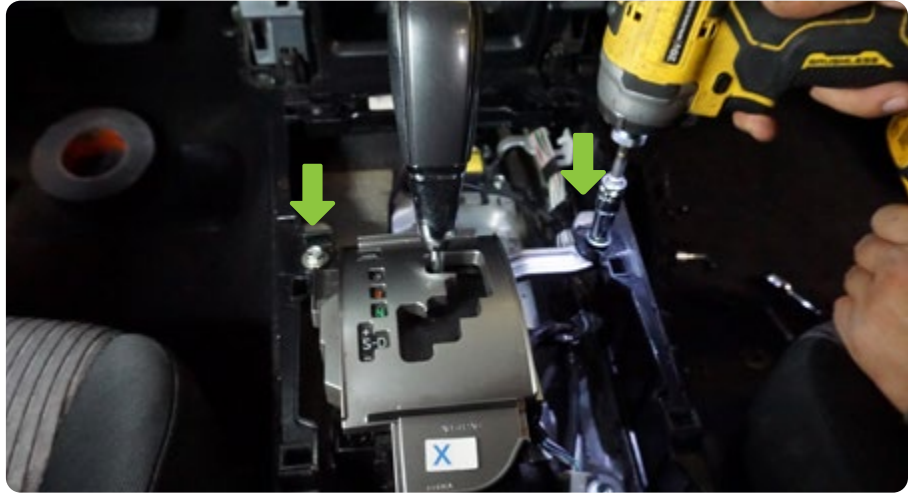

STEP 6 | Use a phillips head screwdriver to remove the four screws located in front of the transmission shift knob, on both sides of the center console. Lift the sides of the center console over the guide pin to remove.

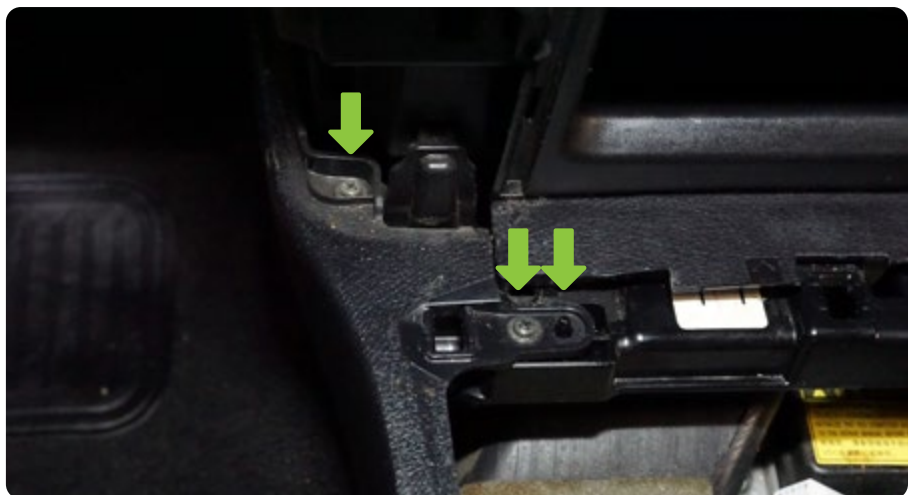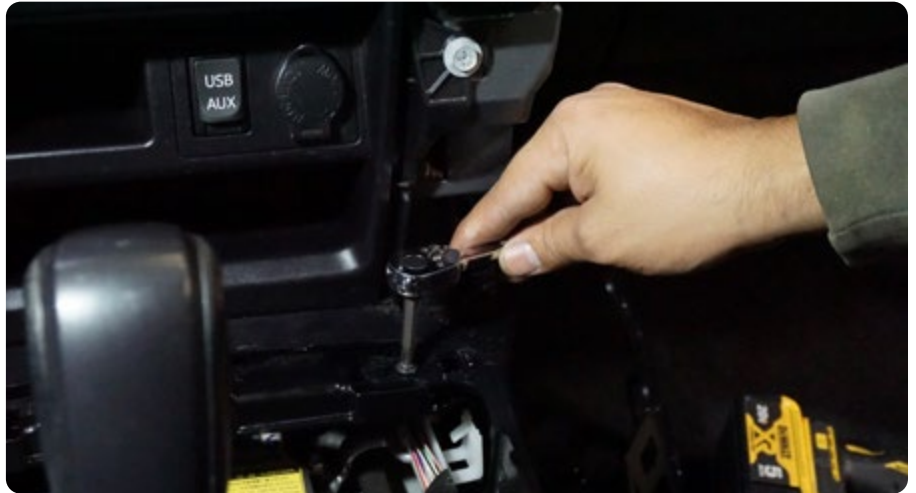

INSTALLATION MANUAL

STEP 7 | Use a stepped drill bit to drill out the marked holes for installation.

We recommend a stepped drill bit so that you do not drill into the rear air conditioning tubing under the center console on the drivers side and due to the angle of drilling for the rear mounts.

Drill accurately and carefully to avoid scuffing the trim unnecessarily.



STEP 8 | Install both mounts using the provided M6 hardware with a 4mm allen bit. Reach back and apply pressure on the nut with your hand until “catches” and is secure. Use a 10mm wrench if necessary.



STEP 9 | Install factory bolts on both sides of transmission shift knob using a 10mm wrench and the factory hardware.



INSTALLATION MANUAL

STEP 10 | Lift the sides of the center console over the guide pin and install factory hardware using a short philips head screwdriver.



STEP 11 | Install trim pieces on the dash by applying pressure until the clips are secure.



STEP 12 | Reconnect the wiring harnesses to the center console.

Install center console by applying pressure until the clips are secure. Ensure wiring will not be pinched during install.





STEP 13 | Install the bridge using the provided M6 hardware with a 4mm allen bit.



INSTALLATION MANUAL

STEP 14 | Double check all hardware is secure and in place. Congratulations, you are done with the install of your Center Console and Bridge.

