

DASH MOUNT

22+ (3RD GEN) TOYOTA TUNDRA

DMT2-01



TOOLS REQUIRED

- 4mm Allen Wrench
- 10mm Wrench
- 11/32 Drill Bit
- Double Sided Tape
- Safety Glasses

SKILL LEVEL

- Novice/Intermediate
- 1 (you)

Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1 Hour

Time to install this should only take about an hour

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.


HARDWARE INCLUDED

- (5) M6x16mm Allen Bolts
- (5) M6 Nutserts
- (10) M6 Flat Washers
- (5) M6 Nylon Lock Nuts
- (4) M6 Counter Sunk Bolts

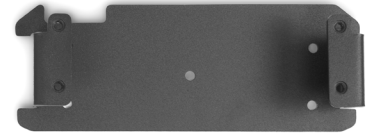

STEP 1 | On a work bench, assemble the DV8 Dash Mount using the provided M6 hardware and a 4mm Allen wrench.

Apply 2 pieces of double sided tape on the bottom of the Dash mount.

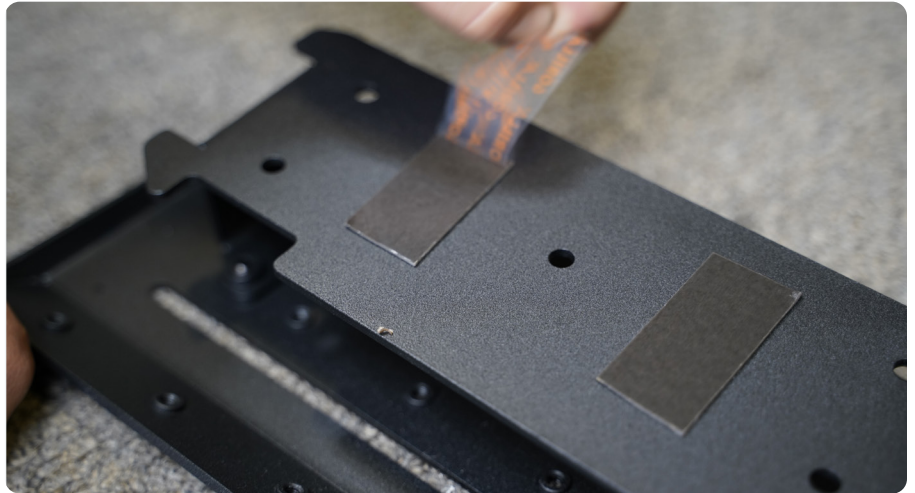

STEP 2 | With a firm grip pull up on the factory dash pocket.

Use a trim clip tool, if necessary.



INSTALLATION MANUAL

STEP 3 | Disconnect the 12v power supply plug.

Reinstall factory dash pocket.



STEP 4 | Place the DV8 Dash Mount in to the factory dash pocket.

Press down firmly.



INSTALLATION MANUAL

STEP 5 | Using a 4mm Allen wrench, remove the (4) M6 Countersunk head screws holding down the DV8 Dash Mount top.



STEP 6 | With a firm grip, remove the factory dash pocket with the DV8 Dash Mount bracket in place.



INSTALLATION MANUAL

STEP 7 | Use a marker to mark the (5) mounting holes you will need to drill to secure the DV8 Dash Mount.



STEP 8 | Remove the DV8 mounting bracket.



STEP 9 | Using a 11/32nds drill bit, drill the (5) mounting holes.



INSTALLATION MANUAL

Optional Step:

Provided are M6 Nutserts and Lock nuts, either can be used with the provided M6 Allen head screws to secure the DV8 Dash Mount to the factory dash pocket.

If desired, install the nutserts using a rivet gun.



INSTALLATION MANUAL

STEP 10 | Secure the DV8 Dash Mount bracket to the factory dash pocket using a 4mm Allen wrench or bit and the provided M6 hardware.



STEP 11 | Reconnect the 12v Power supply plug.



STEP 12 | Install the factory dash pocket and DV8 Dash mount bracket.



INSTALLATION MANUAL

STEP 13 | Secure the DV8 Dash Mount Top to the bracket using a 4mm Allen wrench and provided (4) M6 countersunk hardware.

Plug in any charging cables if desired and feed them through the top mount prior to securing it.

Double check that all hardware is secured.



STEP 14 | Congrats! You are finished with the install of the 22+ Toyota Tundra Dash Mount.

