


DV8 OFFROAD INFEND-03RB(RR)

JL REAR INNER FENDERS

1. Remove your stock factory JL inner fenders and fenders flare from the Jeep.
2. Remove your new DV8 rear inner fenders from their packaging.
3. Locate and separate the driver and passenger side pieces.
4. Install the top section of each piece using the provided hardware.

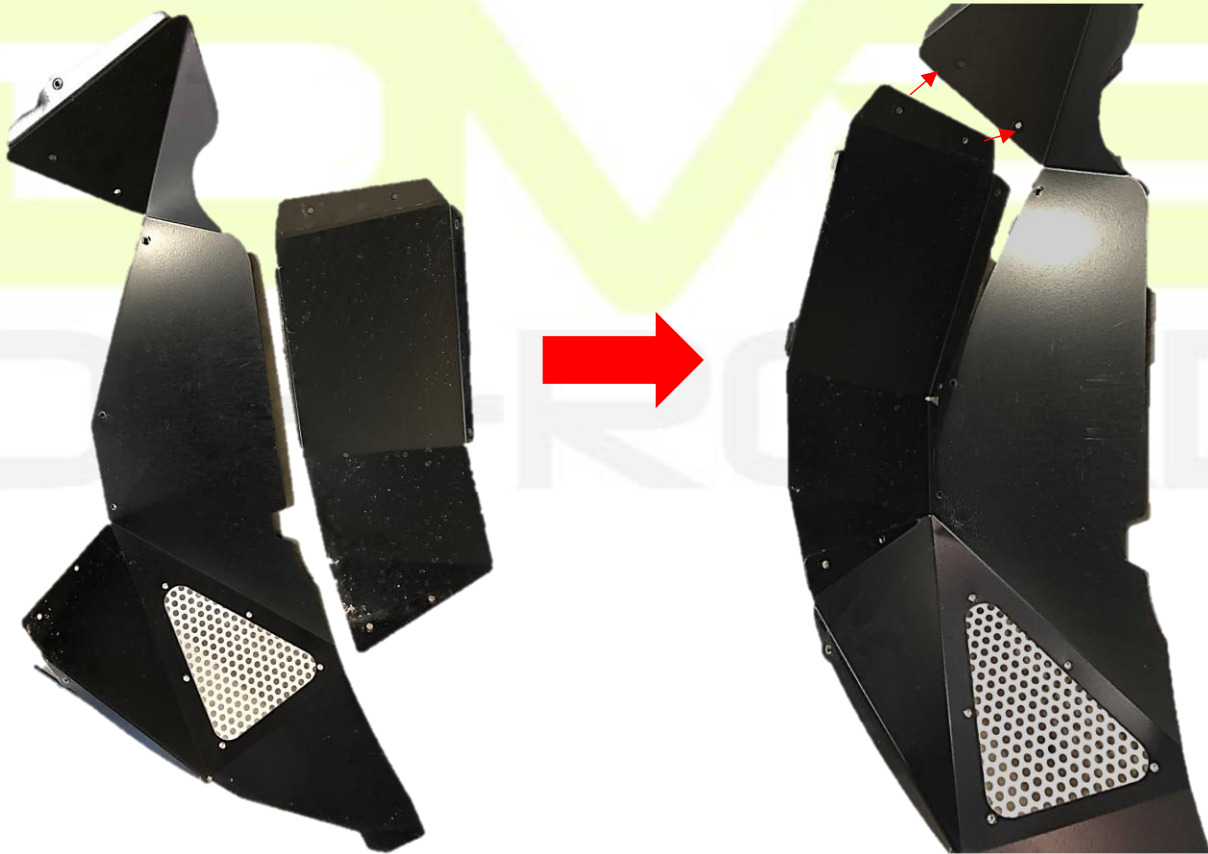

5. Place inner fender into wheel well. Make sure the vent is facing forward.
6. Hold up the front bolt hole against the vehicle and install provided nuts and bolts. Continue to work your way to the center bolt and then the back hole last.



7. Tighten bolts to ensure they are secure.
8. Reinstall fender flare.

If you have any questions or concerns, please feel free to call us at 951-680-9595 or email info@dv8offroad.com