

DV8 Offroad INFEND-03F-B/R


2018+ Jeep Wrangler JL Front Inner Fender Install Instructions

Please inspect all components before install


For Tech Assistance Please Call: 951-680-9595

Tools Required: 3/8" Wrench, 1/8" Allen Wrench

1. For easier access to the work area the front wheels can be removed this step is optional and not 100% necessary.
2. Remove the factory plastic fender well by removing the factory plastic retainers that hold it into place
3. Install the mesh pieces onto all 4 aluminum inner fender panels (these will each have a unique shape corresponding to where they go)
 - a. Ensure that each bolt and nut is tight to avoid rattling, additionally it can be a good idea to run a bead of silicone between the aluminum panel and the mesh to isolate any kind of rattling.
4. Starting on either side, install the rear portion of the 2 piece inner fender to the Jeep by fastening the lower rearward holes with the 10/32 bolt and nut supplied in the kit. (The front portion of the inner fender should not be installed yet)

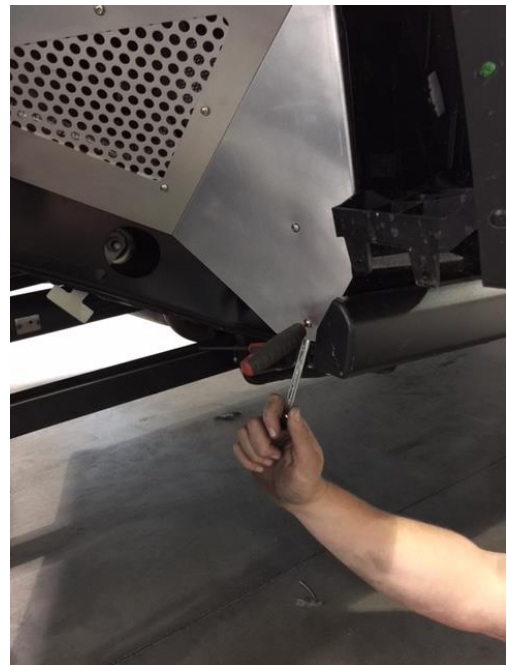

5. Make sure that the turn signal plug is plugged in now (you will not be able to access it once the front panel is installed)
6. Connect the front portion of the inner fender by installing the supplied bolts through the front panel and into the nut-serts preinstalled in the rear portion of the inner fender

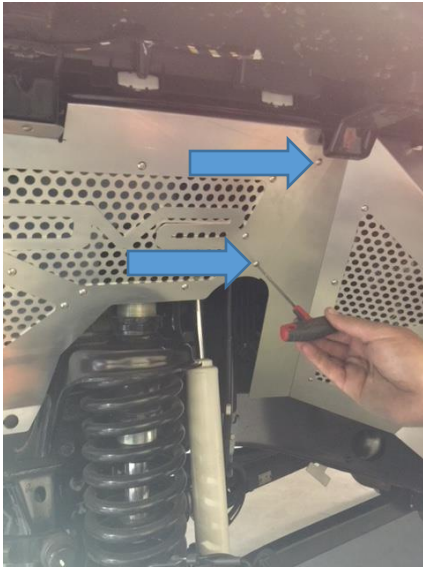

7. Bolt the last bolt through the factory hole shown below



8. Using 2 of the 4 supplied plugs connect the inner fender through the factory frame holes shown in the photo below.



Repeat steps 1 through 8
on the opposite side.
Tighten all hardware.

Please call us with any questions at
951-680-9595 M-F 8 am to 5 pm