

Front Inner Fenders

2021+ FORD BRONCO

INFEND-05FB



TOOLS REQUIRED

- Ratchet
- #4 Allen Head
- 11/32" Drill Bit
- Drill
- Nutsert Tool (M6)
- Philips Head Screwdriver

SKILL LEVEL

- Novice/Intermediate
 - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 3 Hours
- Time to install this should only take about 3 hours

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

STEP 1

You will need to fully remove the front fenders by turning the clips on the underside of the fender down until they feel loose. Once loose, pull the fender away from the Bronco directly towards you, releasing the clips.

Note: Both front and rear fenders are mounted in this manner.

Tools Required:

Philips Head Screw Driver
Panel Clip Removal Tool



UNINSTALL MANUAL


STEP 2

Use a philips head screw driver and panel clip removal tool to remove the clips along the lip of the fender and the section closest to the engine bay.

Note: Check along the inner fender where it meets wheel well thoroughly. They are easy to miss.

Tools Required:

- Philips Head Screw Driver
- Panel Clip Removal Tool

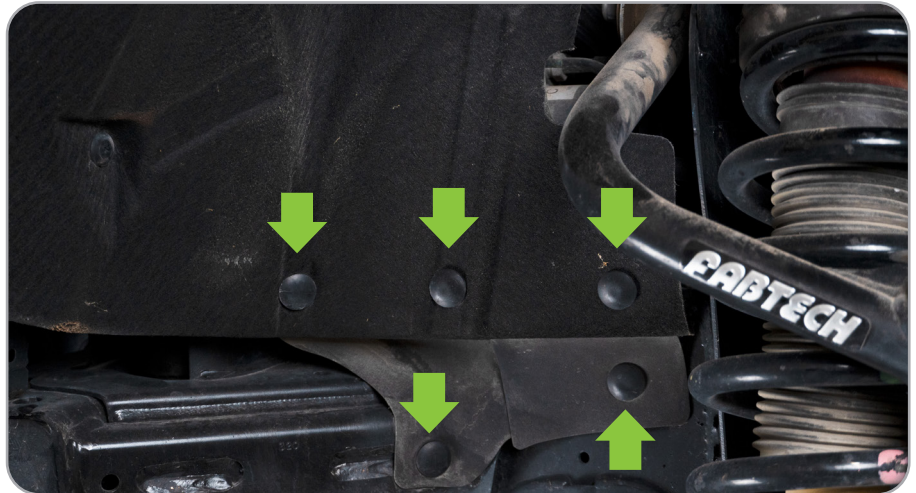

UNINSTALL MANUAL

STEP 3

Remove the inner fender by pulling down on it near the lip of the fender, and then out.



INSTALLATION MANUAL

STEP 1

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.

Hardware Included:


- (24) M6x20
- (37) M6x14
- (37) M6 Serrated Nuts
- (24) M6 Nutserts



STEP 2

Assemble the piece A and B using a #4 allen head using the provided M6x20 and a #4 allen head.


Note: Ensure mesh is secure before installation. If you want to paint the mesh, it is recommended before installation.

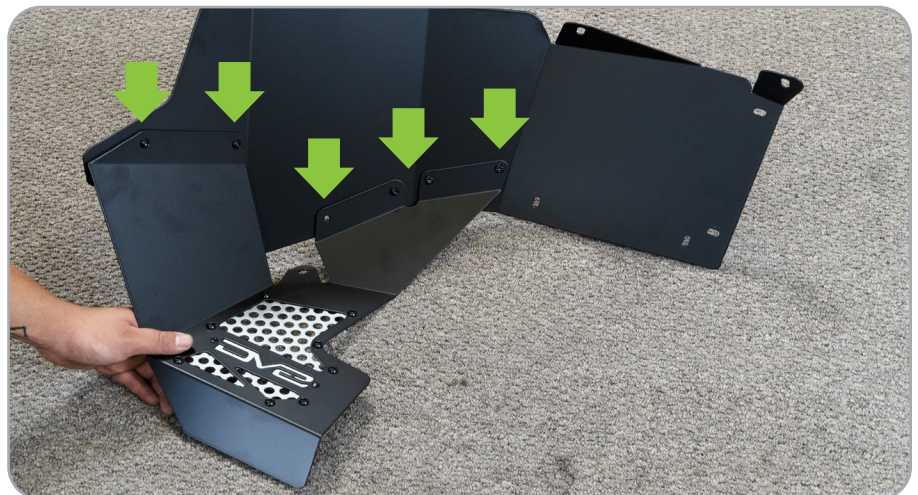

INSTALLATION MANUAL


STEP 3

Install piece C to the assembly, noting the orientation of piece C in reference to the assembly.

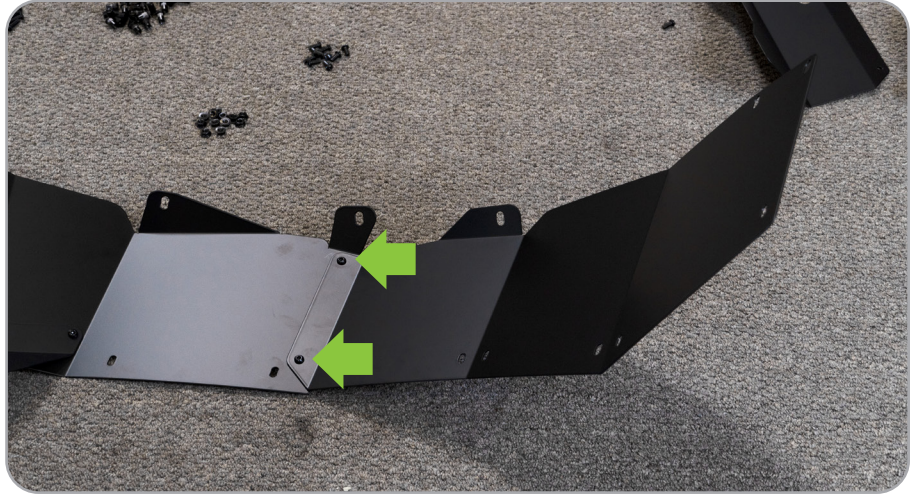

STEP 4

Install Piece D to the assembly, noting the orientation of piece D in reference to the assembly.

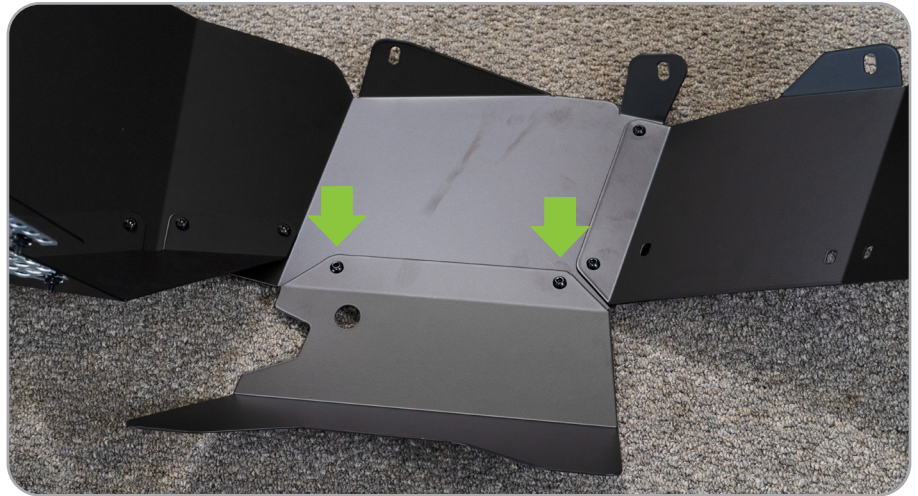

STEP 5

Install piece E to the assembly, noting the orientation of piece E in reference to the assembly.



INSTALLATION MANUAL


STEP 6

Bend back the mounting tabs that will not be used for installation (From the front, this will be the 1st and 5th). The remaining tabs can be adjusted by hand to better line up with the DV8 inner fender during installation. If you are unsure of which tabs to bend, you can gently maneuver the inner fender into the wheel well, and reference the holes on the inner fender with the mounting tabs.



STEP 7

On the passenger side of the vehicle an additional bracket will be installed using a christmas tree clip that will be taken from the stock inner fender.

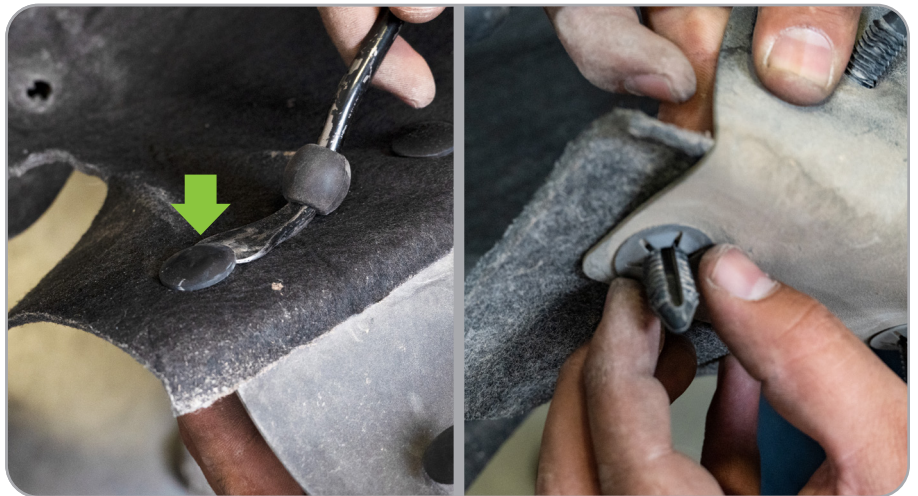

INSTALLATION MANUAL

STEP 8

Drill out the holes in the remaining tabs with 11/32" drill bit and install nutserts using a nutsert tool.




INSTALLATION MANUAL

STEP 9

Maneuver the inner fender into the wheel well carefully so as not to damage the inner fender. It may take a few attempts to get it correct.

Install the DV8 inner fenders using a #4 allen head and provided M6x14 hardware.

Note: The passenger side has slightly different mounting points on inner fender where the additional bracket is installed.

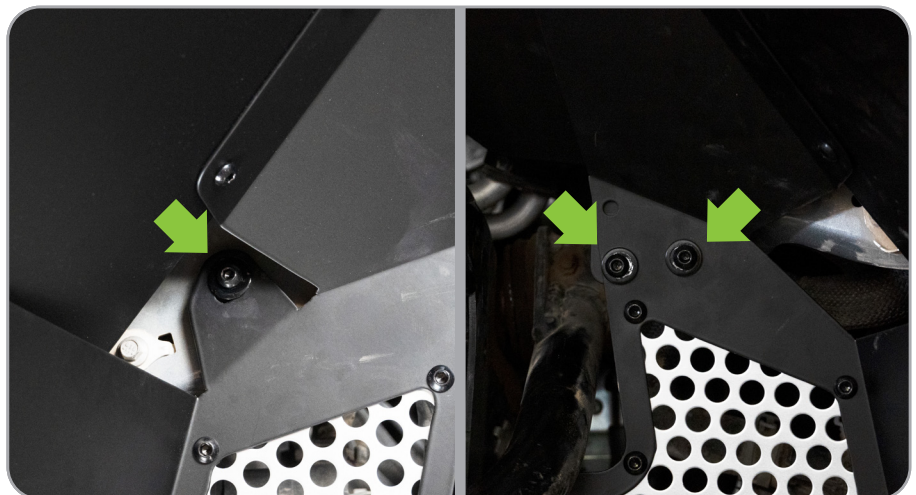

INSTALLATION MANUAL

STEP 10

Double check fitment and all hardware is secure. Repeat steps for other side.

