

Rear Inner Fenders

2021+ FORD BRONCO

INFEND-05RB



TOOLS REQUIRED

- Ratchet
- #4 Allen Head
- Drill
- 11/32" Drill Bit
- Nutsert Tool (M6)
- Philips Head Screwdriver

SKILL LEVEL

- Novice/Intermediate
 - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 3 Hour
- Time to install this should only take about 3 hours

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

STEP 1

You will need to fully remove the front fenders by turning the clips on the underside of the fender down until they feel loose. Once loose, pull the fender away from the Bronco directly towards you, releasing the clips.

Note: Both front and rear fenders are mounted in this manner.

Tools Required:



- Ratchet
- 7mm Deep Socket
- Panel Clip Removal Tool
- Philips Head Screwdriver



UNINSTALL MANUAL

STEP 2

Use a philips head screw driver and panel clip removal tool to remove the various clips securing inner fender to the vehicle.

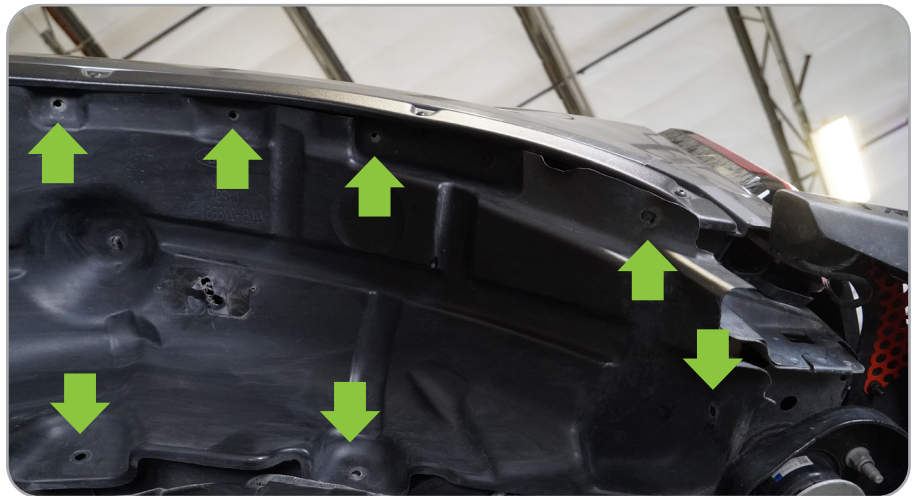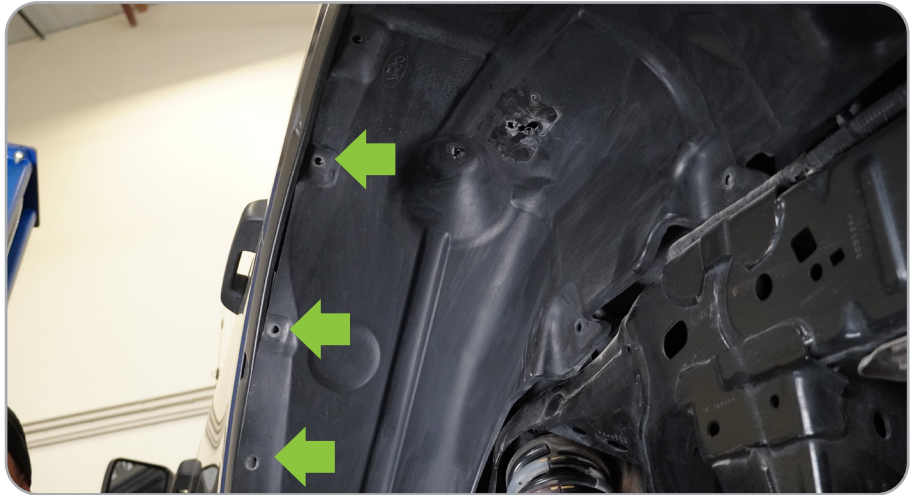

UNINSTALL MANUAL

STEP 3

Use a 7mm deep socket to remove the nuts securing the inner fender, located at the top of the inner fender and lower front section of the inner fender.

NOTE: Passenger side will have two nuts securing it in the top section.



STEP 4

Remove inner fender by pulling down by the lip of the fender and out.



INSTALLATION MANUAL

STEP 1

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.

Hardware Included:

- (16) M6x20
- (19) M6x14
- (16) M6 Serrated Nuts
- (19) M6 Nutserts



STEP 2

Assemble the DV8 inner fender using a #4 allen head and provided M6x20 hardware. The upper piece will sit on top of the lower piece.

NOTE: Ensure mesh hardware is secure before installation. Drivers side is pictured.





INSTALLATION MANUAL

STEP 3

Bend back the tabs that will not be used during installation. (From the front you will bend the 1st, 3rd, 4th, 6th, and 7th tabs).

The remaining tabs that will be used for installation can be adjusted by hand to better line up with the inner fender during installation.

If you are unsure of which tabs to bend, you can maneuver the inner fender into the wheel well and reference the mounting holes on the inner fender to find the mounting tabs.

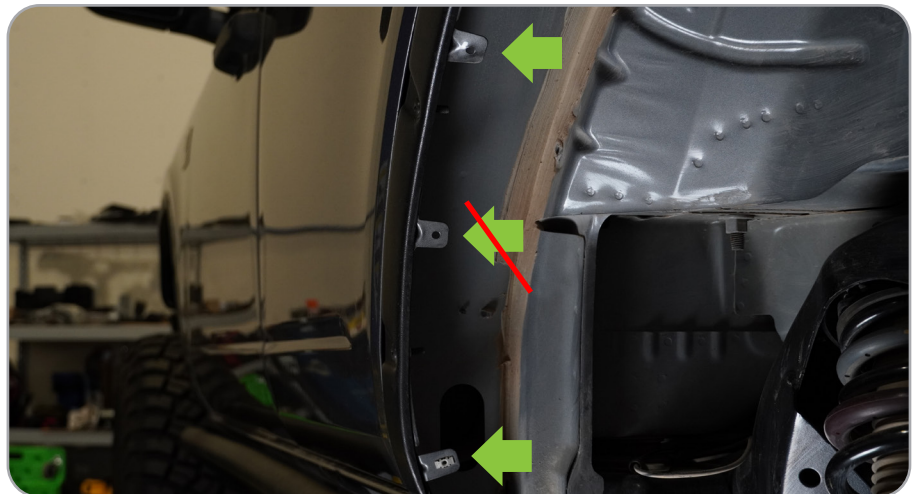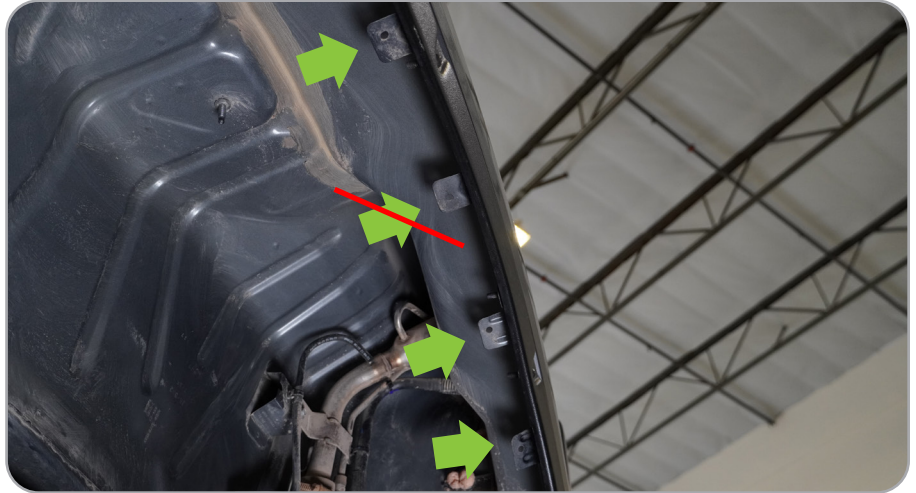

STEP 4


Use 11/32" inch drill bit to drill out the holes on the remaining tabs.



INSTALLATION MANUAL

STEP 5

Install provided nutserts into the remaining tabs using a nutsert tool.

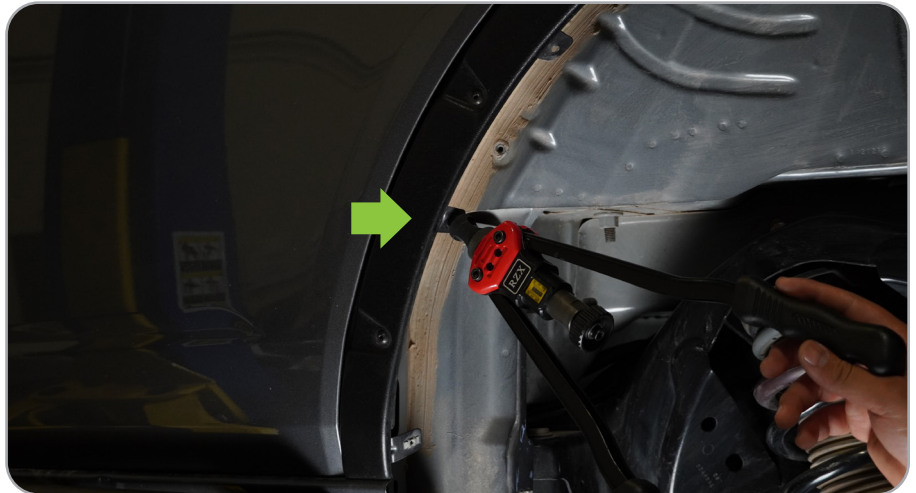

STEP 6

Manuever the inner fender into the wheel well carefully as not to damage the inner fender. It may take a few attempts to get it correct.

Install the DV8 inner fenders using a #4 allen head and provided M6x14 hardware.



STEP 7

Reinstall factory screw with philips head screwdriver. Located towards the lower front section of the inner fender.



INSTALLATION MANUAL

STEP 8

OPTIONAL: You may choose to remove the clip for the wiring harness and push it back for a cleaner look.



STEP 9

Double check fitment and all hardware is secure. Repeat steps for other side.

