

QUICK RELEASE D-RING LICENSE PLATE MOUNT UNIVERSAL LPUN-01



TOOLS REQUIRED

- #4, #6 Allen tool
- 10mm, 17mm Socket/ Wrench

SKILL LEVEL

- Novice
- 1 (you)

Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1 Hour

Time to install this should only take about half an hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




INSTALLATION MANUAL


Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (4) M6x20mm Bolts
- (4) M6 Lock Nuts
- (8) M6 Flat Washers
- (1) M10x65mm Bolt
- (1) M10 Lock Nut
- (2) M10 Flat Washers
- (2) Spacers

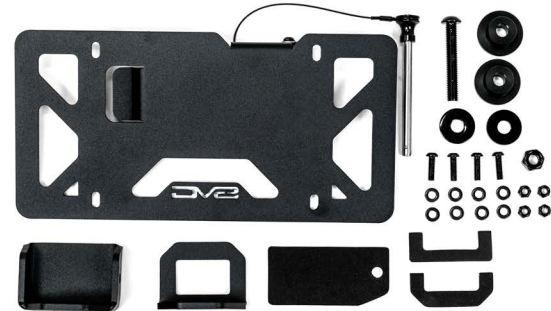

STEP 1 | Apply the provided “peel-n-stick” foam to both of the mounting brackets as shown.

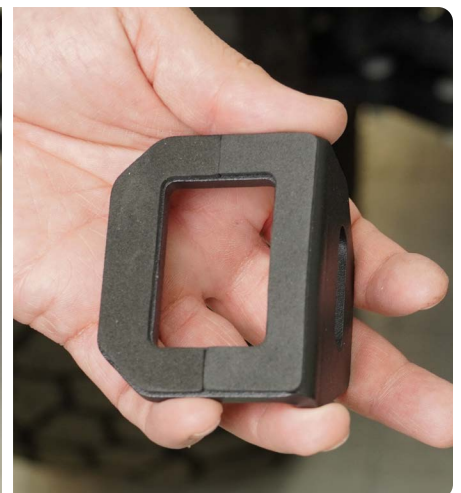

INSTALLATION MANUAL

STEP 2 | Thread the provided M10 bolt with 1 of 2 flat washers through the plate frame mounting bracket slot, then through 1 of 2 D-ring bushings so that the mounting bracket is sandwiched between the flat washer and D- ring bushing as shown.



STEP 3 | Thread the M10 bolt and bushing into the D-ring.

Thread the second bushing through the M10 bolt and into the D-ring.

Note: The bushing is designed for d-ring mount with a 1" diameter hole



INSTALLATION MANUAL

STEP 4 | Place the license plate frame bracket with square cut out onto the M10 bolt.



STEP 5 | Use the second provided M10 flat washer and M10 nylon lock nut to loosely secure the license plate frame brackets to the D-ring.



STEP 6 | Use a #6 allen tool and 17mm socket to secure the license plate frame brackets in place.

Ensure both brackets are even/level with each other. Some adjustment may be needed once license plate bracket is mounted.





STEP 7 | Using a #4 allen tool, 10mm socket/wrench and the provided M6 hardware, secure the license plate to the DV8 license plate frame.



INSTALLATION MANUAL

STEP 8 | Insert the lock tab on the back of the license plate frame into the square cut out mounting bracket as shown.



STEP 9 | Insert the locking pin through the license plate tab and into the mounting bracket. Ensure the lock pin is through both pin holes on the mounting bracket to prevent the frame from rattling.

During this step, if you need to adjust the brackets, loosen up the main M10 bolt with #6 allen and 17mm wrench slightly until the brackets can be adjusted and then re-tighten the M10 bolt.



STEP 10 | Once completed, ensure the license plate does not lift up easily or come off. The pin can be ran upside down to hide the pin button.

