

POCKETED REAR WINDOW MOLLE

2021+ FORD BRONCO

MPBR-08



TOOLS REQUIRED

- T-50 Torque head socket
- #4, #5 Allen Tool
- 10mm wrench
- Safety Glasses

SKILL LEVEL

- Novice/Intermediate
 - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1.5 Hours
- Time to install this should only take about an hour and a half

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (8) M6x20 Bolts
- (2) M8 Flat Washer
- (20) M6 Flat Washers
- (6) M6 Nylock Nuts
- (4) M6x14 Bolts
- (2) M8x30 Bolts

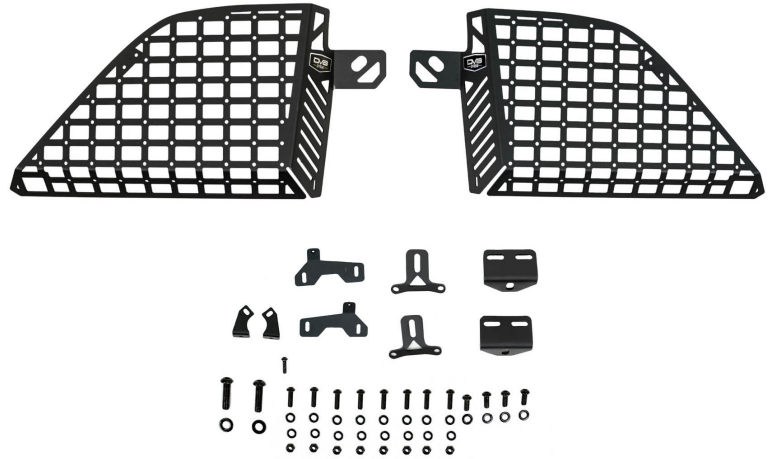

STEP 1 | Remove the seat belts mounting bolt cover by pulling down on top and away from seat belt. Use a T50 Torx tool to remove the seat belt mounting bolt



STEP 2 | Using the T50, remove the (3) bolts shown holding the hardtop to the cab.



INSTALLATION MANUAL

STEP 3 | Using the factory hardware, loosely install the rear bracket onto the hardtop mount.

Note the orientation to ensure you have the correct bracket.



STEP 4 | Loosely Install the forward bracket on the hardtop mount using a T50 torx bit and the factory hardware.

Note the orientation to ensure you have the correct bracket.



STEP 5 | Lastly, using a #5 allen head and the provided M8 bolt, loosely install the roll bar bracket onto the vehicle.

Note the orientation to ensure you have the correct bracket.



INSTALLATION MANUAL




STEP 6 | Moving to the molle panel, install the lower rear bracket onto the panel until secure using the M6 hardware provided a 10mm socket and #4 allen.

Note the orientation to ensure you have the correct bracket. (Shown in image is the passenger side).



INSTALLATION MANUAL

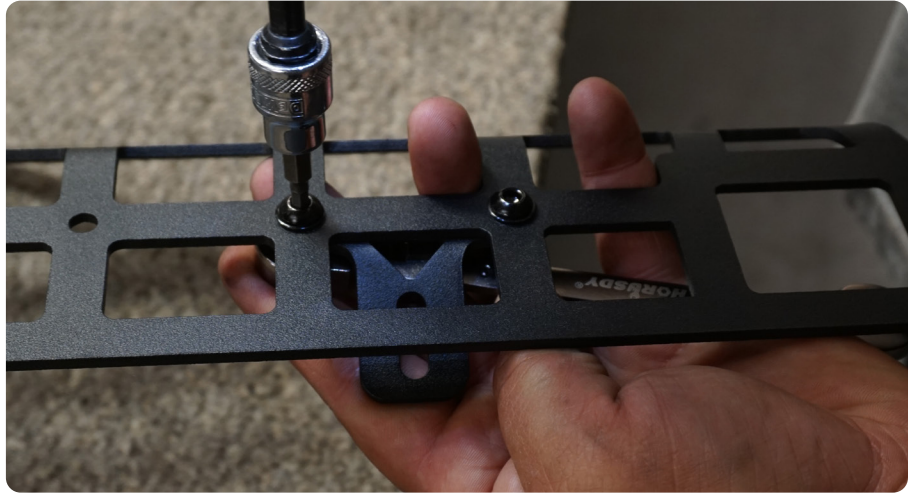

STEP 7 | Once the lower bracket is installed, position the molle panel into the vehicle against the previously installed brackets.

To hold the molle panel up, using the seat belt bolt, loosely install into place.



INSTALLATION MANUAL

STEP 8 | Using the provided M6 hardware, #4 allen and 10mm wrench or socket, attach panel to the mounts placed in the prior steps.



INSTALLATION MANUAL

STEP 9 | Once panel is mounted, align and center panel to ensure it is not rubbing on any of the plastic or painted surfaces.

Holding in place, secure all hardware and mounts.

Re-tighten seat belt bolt.



STEP 10 | Replace seat belt cover.



STEP 11 | Double check panel is tight and all hardware is secure.

Congratulations, you are done with the install of the Bronco 4Dr Hardtop Rear Molle Panels.

