

REAR DOOR SLIM MOLLE POCKETS

11-18 JEEP JK 4 DOOR

MPJK-08



TOOLS REQUIRED

- T-25 Torx Tool
- Pliers
- Phillips Head Screwdriver
- Preferred Cutting Tool

SKILL LEVEL

- Novice/Intermediate
- 1 (you) person

Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- .5 Hour

Time to install this should only take about half an hour

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (2) M5x30mm Phillips Head Screws
- (2) Spacers
- (2) Flat Washers
- (2) "L" Shaped Mounting Tabs



STEP 1 | Using your preferred cutting tool, cut away the factory door pocket netting, leaving the top elastic band in place.



INSTALLATION MANUAL


STEP 2 | Optional: If you would like to remove the elastic band and netting, pull on the netting/elastic band with a firm grip until the guide wire can be seen.

Remove the guide wire netting and elastic band.

Note: Using a pair of pliers can make it easier to grip the netting/elastic band.



STEP 3 | Use a T25 torx tool to remove the door panels lower mounting screw.

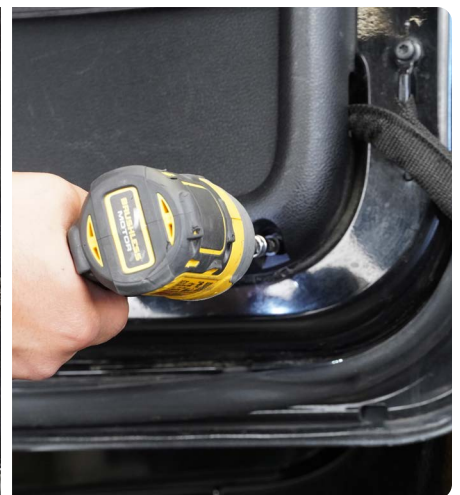

INSTALLATION MANUAL

STEP 4 | Install the DV8 Rear Molle Pocket by pressing in the pocket tabs between the door panel and the factory door pocket trim panel.



STEP 5 | Put the provide spacer, hardware, flat washer and mounting tab together as shown.



INSTALLATION MANUAL

STEP 6 | Place the bent end of the tab into the slot at the bottom of the pocket.



STEP 7 | Use a phillips head screw driver to secure the Molle Pocket in place.



INSTALLATION MANUAL

STEP 8 | Double check that the mounting hardware is secure.

Congratulations, installation of the DV8 JK Rear Door Slim Molle Pockets is now complete.

