

MTO SERIES REAR BUMPER

2015-2022 CHEVY COLORADO AND GMC CANYON
RBCS3-01



TOOLS REQUIRED

- 10mm, 16mm wrench
- 7mm, 10mm, 14mm, 21mm, socket
- Flat head screwdriver
- Trim Tool
- Safety Glasses

SKILL LEVEL

- Novice/Intermediate
 - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 3 Hours
- Time to install this should take about 3 hours.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- | | |
|------------------------|------------------------------|
| (4) M10x30mm Hex Bolts | (4) M6x20mm Allen Head bolts |
| (4) M10 Spring Washers | (8) M6 Washers |
| (4) M10 Flat Washers | (4) M6 Lock Nuts |
| (4) M10 Clip Nuts | |



STEP 1 | To remove the bumper being by removing the license plate. Unplug the license plate light wiring harness.

Unplug the trailer plug connector from underneath the vehicle.



INSTALLATION MANUAL

STEP 2 | Disconnect the main wiring harness. Use a trim tool to unclip the wiring harness push pin from the frame.

Remove the license plate light. Grab the light/plug and rotate left to remove.



STEP 3 | Using a 21mm socket or wrench remove factory bolts on both sides of the bumper (2 per side). These will be tough due to factory thread locker used.

Note: Assistance is recommend to prevent bumper from falling and injury or damage to the vehicle.



INSTALLATION MANUAL

STEP 4 | Once bumper is removed, place on soft surface to prevent damage.

Begin by removing the trailer plug. Use a flat head or trim clip tool press in on both sides of the metal retaining clip and push the plug out toward the front of the bumper.



STEP 5 | Using a 7mm socket or wrench, remove both license plate lights from the bumper.



STEP 6 | Remove the wire harness from the bumper using a trim tool.



INSTALLATION MANUAL

STEP 7 | Install trailer wiring connector into the DV8 bumper by pressing the connector through the front side of the bumper until it snaps into place



STEP 8 | Use a 10mm wrench, #4 Allen tool and the provided M6 hardware to secure the license plate light housing in place.



STEP 9 | Reinstall the license plate lights in to the light housings.

Use zip ties to secure any loose wiring harness to the bumper.




INSTALLATION MANUAL



STEP 10 | If running pod lights, install them now.

For this install we are using (2) 3" DV8 Elite pod lights.

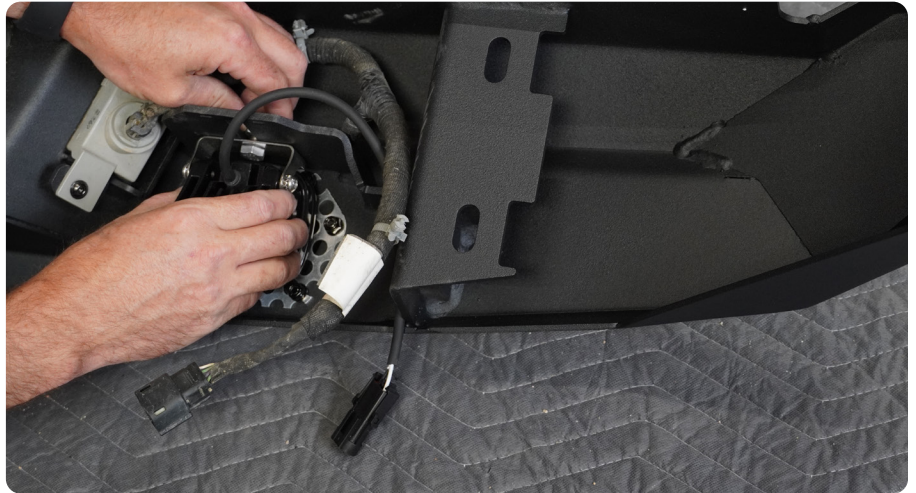

STEP 11 | Install the provided M10 clip nuts onto the bumper mounting brackets.




INSTALLATION MANUAL

STEP 12 | Place the frame mounting bracket on the bumper, use the provided M10 Hex bolts to loosely secure bracket in place.

Use 1 split washer and 1 flat washer per bolt.



STEP 13 | With the license plate lights, trailer connector and frame brackets installed on the bumper it is ready to be mounted on the vehicle.

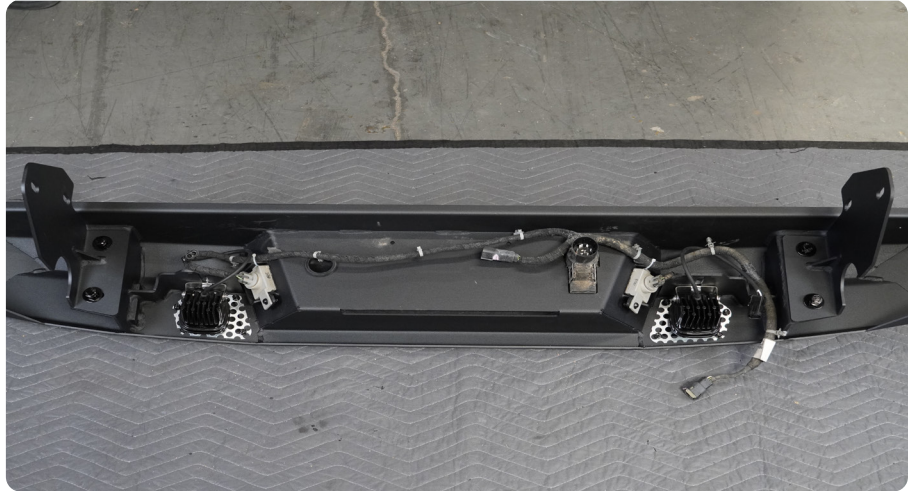


STEP 14 | With assistance lift the bumper in place and loosely secure the bumper using the factory frame bolts previously removed in step 3 and a 21mm socket.

Adjust the bumper side to side and up and down to center the bumper. Ensure the tailgate does not impact the bumper when opening and closing the tailgate.




INSTALLATION MANUAL

STEP 15 | Secure the factory hardware using a 21mm socket or wrench secure factory bolts on both sides of the bumper (2 per side)

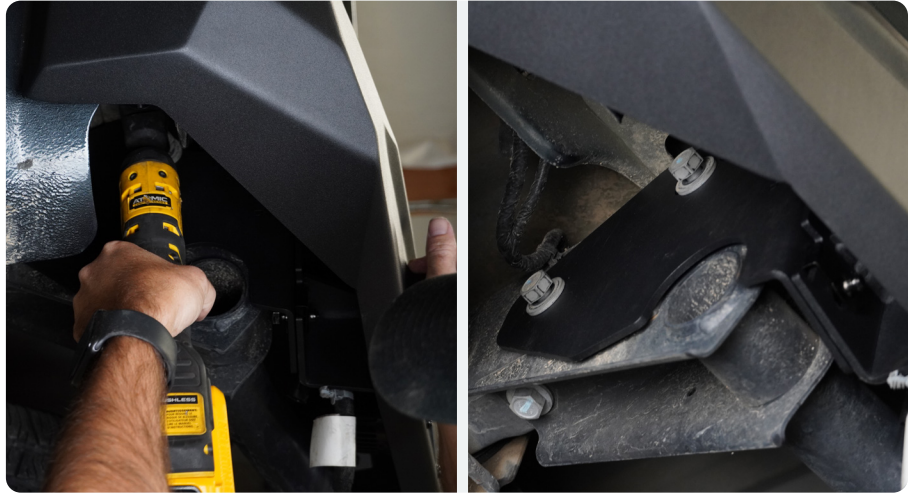

STEP 16 | Using a 16mm wrench secure hardware on the bumper mounting brackets.



INSTALLATION MANUAL

STEP 17 | Plug in the license plate and trailer harness into the factory plugs that were removed in steps 1 & 2.



STEP 18 | Double check all hardware is secure and all plugs are properly connect.

Congratulations, you are done with your install of the DV8 MTO Series Rear Bumper!

