

FRONT SKID PLATE

2021 FORD BRONCO

SPBR-07



TOOLS REQUIRED

- 6mm Hex Bit
- 13mm, 15mm, 18mm Allen Head
Sockets

SKILL LEVEL

- Novice/Intermediate
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1 Hour

Time to install this should only take about an hour

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

• Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (4) M10x35 Allen Head Bolts
- (4) M10 Lock Washers
- (4) M10 Enlarge Washers
- (7) M8x20 Allen Head Bolts
- (7) M8 Nylon Lock Nuts
- (14) M8 Flat Washers



STEP 1 | Use a 15mm socket to remove the four bolts holding the skid plate to the vehicle.





INSTALLATION MANUAL

STEP 2 | Remove the skid plate from the Bronco.




STEP 3 | With the underside exposed remove the factory bolt using a 18mm socket.

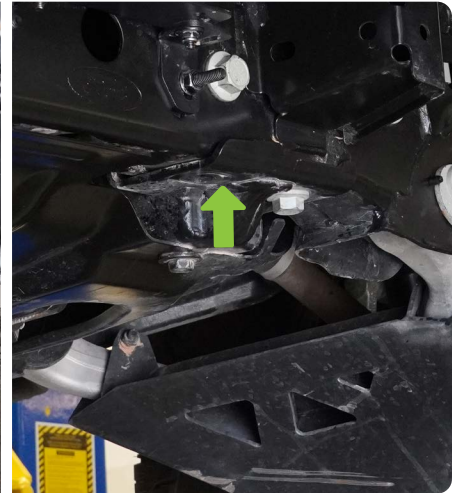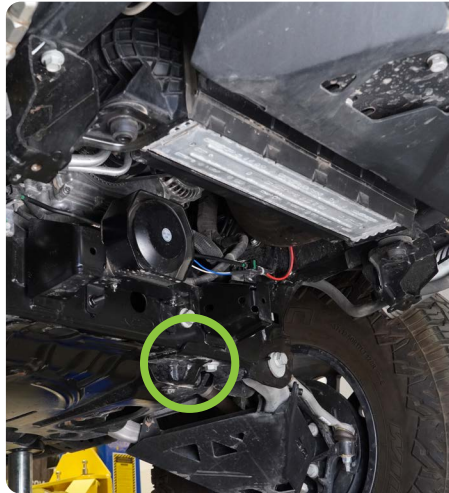

STEP 4 | Begin the assembly of the DV8 Skid Plate using the provided M8 hardware.

Use (2) washers and (1) lock nut per M8 bolt.

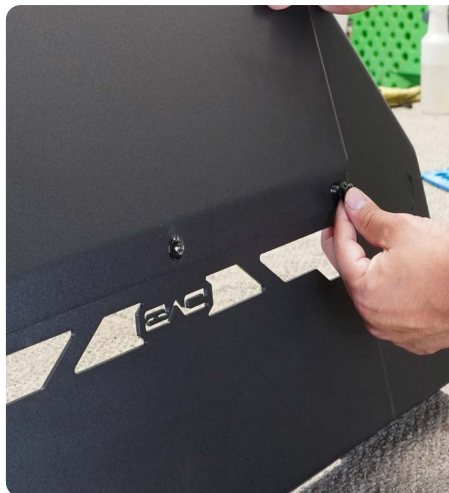

INSTALLATION MANUAL

STEP 6 | Use a 13mm socket to secure all the hardware.



STEP 7 | With assistance loosely secure the skid plate using the provided M10 hardware.



INSTALLATION MANUAL

STEP 8 | Use a 6mm Hex bit to tighten all the bolts until secure.



STEP 9 | Double check fitment, and all hardware is secure.

Congratulations, installation of the Bronco Front Skid Plate is now complete.

