

## A-ARM SKID PLATE

24+ TACOMA

SPTT1-03



### TOOLS REQUIRED

- 10,17mm wrench (ratchet wrench recommended)
- Trim Tool
- Safety Glasses

### SKILL LEVEL

- Novice/Intermediate
  - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

### TIME REQUIRED

- 1 Hour
- Time to install this should only take about an hour

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



# INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

## HARDWARE INCLUDED


- (2) M10x90 Carriage Bolts
- (2) M6 Lock Nut
- (2) M10x85 Carriage Bolts
- (2) M6 Washers
- (2) M6x75 Carriage Bolts
- (4) M10 Lock Nuts
- (4) M10 Washers



**STEP 1** | Clean off any dirt or debris from underside of the lower control arms.

Use a 12mm socket to remove (4) bolts retaining factory front skid plate. Set the skid plate off to the side.

*Please note: If running factory non-TRD skid plate trim along the line*

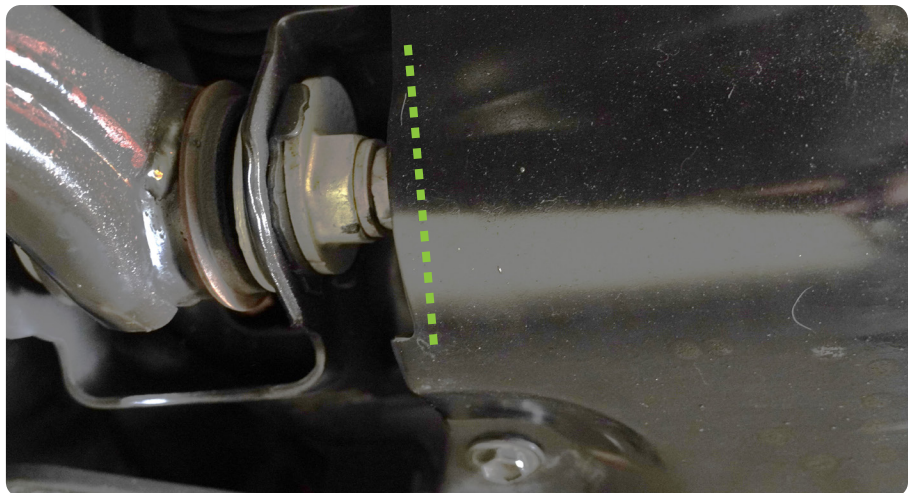

# INSTALLATION MANUAL

**STEP 2** | Use a trim tool to remove plug.



**STEP 3** | Place the skid plate up against the a-arm with the DV8 logo facing the front of the truck.



**STEP 4** | Align the holes. Place carriage bolt into the skid plate pushing through the arm.

Be sure to use the M10x90 bolt at the bolt hole closest to the DV8 logo.



# INSTALLATION MANUAL

**STEP 5** | Place washer on the top side of the a-arm over the bolt and loosely secure with the lock nut.

Be sure to use the M10 washer and nut.



**STEP 6** | Use the M10x85 bolt and loosely secure with washer and nut.

Please note, this bolt will also require the M10 washer and nut.



**STEP 7** | Use the M6x75 bolt loosely secure with the M6 washer and nut.



## INSTALLATION MANUAL

**STEP 8** | Once all the bolts are in place, use a 17mm wrench to secure the large nuts with a 17mm wrench and a 10mm for the M6 carriage bolt.



**STEP 9** | Repeat on the other side. Check all hardware is secure and not touching any component of the suspension.

Congratulations! You are done with the install of your Tacoma A-Arm Skid Plates.

