

FRONT SKID PLATE

2016-2023 TOYOTA TACOMA
SPTT1-04



TOOLS REQUIRED

- 12mm, 17mm sockets
- Socket extension

SKILL LEVEL

- Novice/Intermediate
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful.

TIME REQUIRED

- 1.5 Hours

Time to install this should only take about an hour and a half.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL



Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

None, factory hardware used.

STEP 1 | Begin by removing factory skid plate. The two plate braces need to be exposed and removed.



Note: The factory bolts on the skid plate braces and the two 12mm bolts on the rear cross member will be reused.

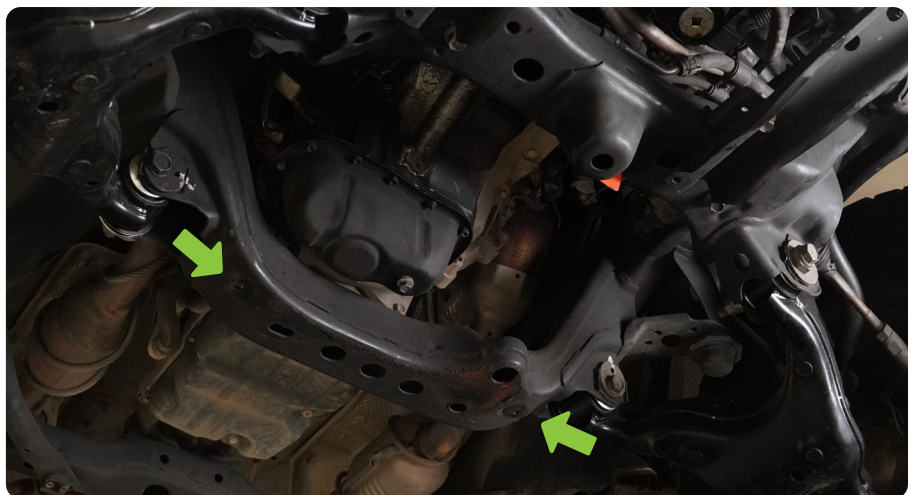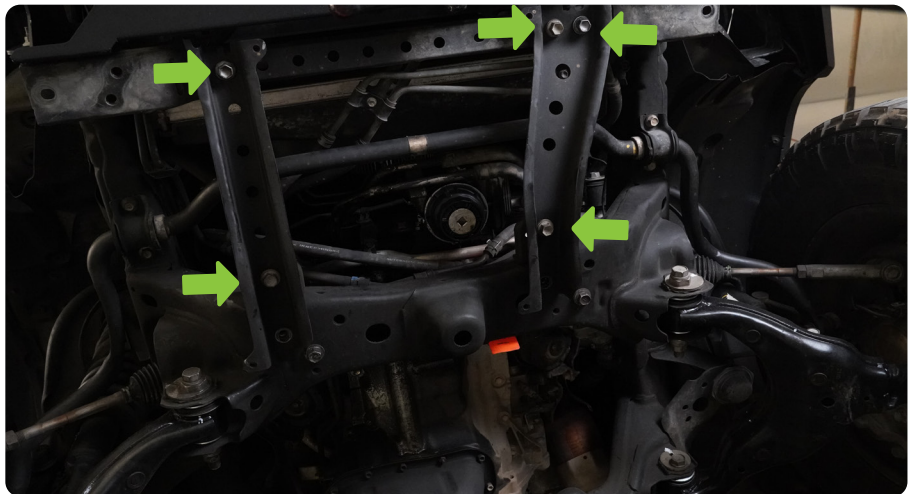

INSTALLATION MANUAL


STEP 2 | Use a 17mm socket to remove bolts from the factory skid plate braces.

Remove the two bolts from one and three from the other.

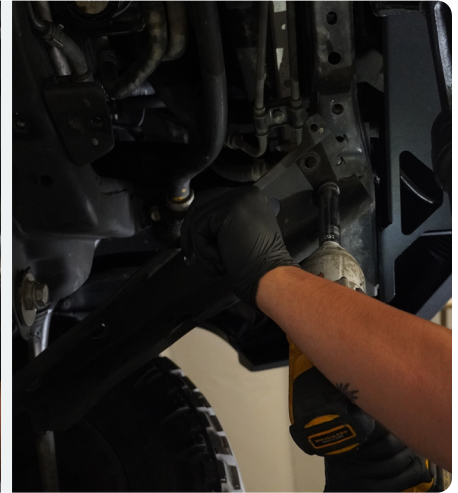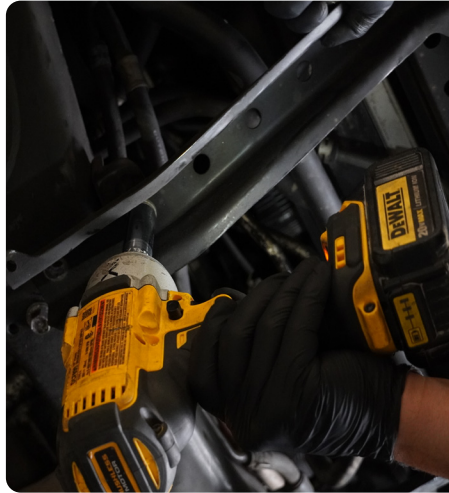

STEP 3 | With assistance loosely secure the skid plate using the factory hardware from the skid plate braces and a 17mm socket.

Note: 17mm socket with a extension is recommended due to the recessed mounting.

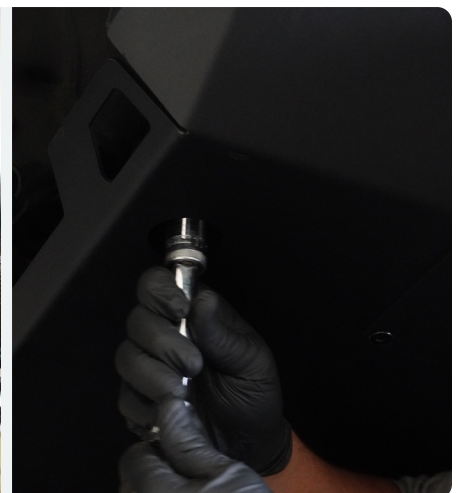

INSTALLATION MANUAL

STEP 4 | Use a 12mm socket to loosely secure the factory bolts on the rear cross member to the rear mounting point.



STEP 5 | Once all the hardware is in place, tighten all the bolts until secure.



STEP 6 | Congratulations, you are have completed the installation of the Toyota Tacoma DV8 Front Skid Plate.

