

PINCH WELD COVERS

21+ FORD BRONCO (2-DOOR)

SRBR-06



TOOLS REQUIRED

- #4, #5 Allen Bit
- 10, 13mm Wrench

SKILL LEVEL

- Novice/Intermediate
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1.5 Hour

Time to install this should only take about an hour and a half

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (8) M8x25 Allen
- (8) M8 Flat Washer
- (8) M8 Serrated Nut
- (4) M6x30 Allen
- (4) M6 Flat Washer

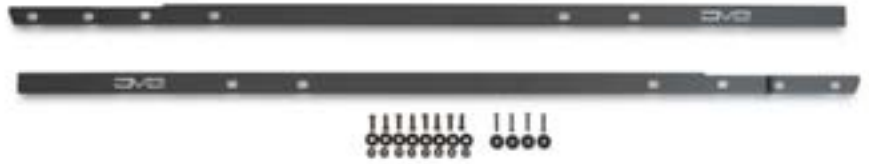

STEP 1 | Prior to installation, remove any factory sliders, steps, or rock rails if equipped.

Use a 10mm socket to remove the bolts located on the pinch weld covers towards the front of the vehicle, directly behind the front tire.



INSTALLATION MANUAL

STEP 2 | Place the pinch weld covers up to the vehicle with the logo closest to the rear tire.

Loosely secure the pinch welds using the provided M6 and M8 hardware.

The M6 bolts and washers will be used for the front mounting holes.

The M8 hardware will be used for all other mounting holes.

Washers are only needed on the side with the DV8 covers and the exposed allen head bolt. It is not necessary to install them on the inside of the pinch weld.



INSTALLATION MANUAL

STEP 3 | Secure the front M6 hardware using a #4 allen bit.

Secure the remaining M8 hardware using a #5 allen bit and a 13mm wrench.



STEP 4 | Double check all hardware is secure.

Congrats! You are finished with the install of the 2021+ Ford Bronco 2-Door Pinch Weld Covers.

