

OE PLUS STEPS

2019+ CHEVY/GMC 1500

SRCS1-01



TOOLS REQUIRED

- Trim Clip Tool
- 13mm Deep-set Socket
- Safety Glasses

SKILL LEVEL

- Novice/Intermediate
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1.5 Hours

Time to install this should only take about an hour and a half.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (16) M8x30mm Bolts
- (16) M8 Split Washer
- (16) M8 Flat Washers



STEP 1 | (Driver side installation shown) (Not factory step equipped).

Starting below the driver door and working your way back, use a trim clip tool to remove (8) of the factory push clips from the threaded rocker panel bolt holes as shown.


(Vehicles equipped with factory steps): Assistance is needed to support the step during hardware removal. Use a 13mm deep-set socket to remove the (16) factory hex bolts that secure the factory steps in place. Use caution when removing the bolts as these bolts hold up the factory steps.





STEP 2 | With assistance, lift the DV8 OE Plus Steps up to the vehicle and use the provided M8x30 hex head bolts to loosely secure the steps in place.

Use (1) split washer and (1) flat washer per M8x30mm hex bolt.

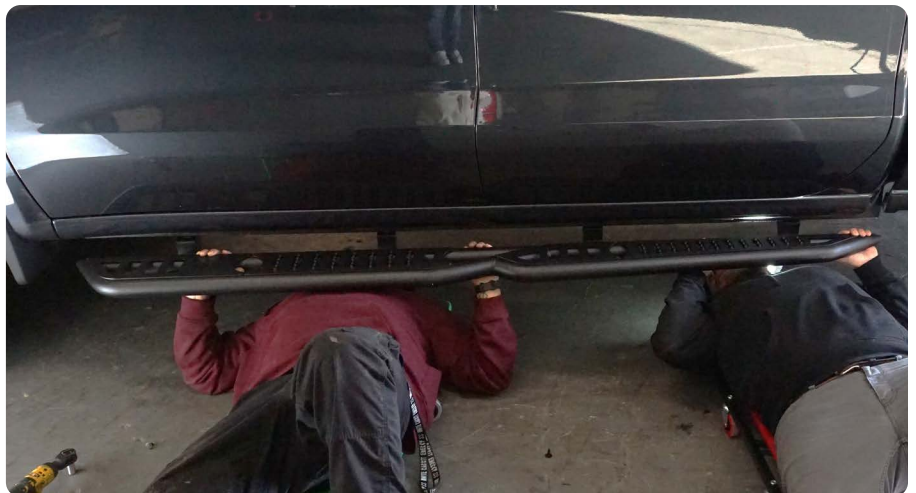


INSTALLATION MANUAL



STEP 3 | The steps have the ability to be adjusted forward and back, adjust the step to your liking.

For our install we adjusted the step all the way forward so that the front of the step aligns with the rocker/fender gap.

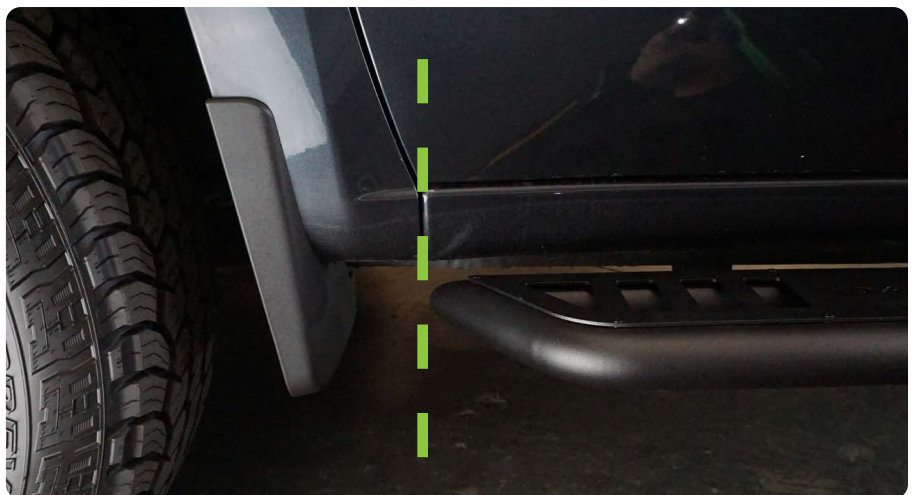

INSTALLATION MANUAL

STEP 4 | Use a 13mm deep-set socket to secure the M8 hardware/steps in place.

Tech Tip: Tighten the bottom bolts first then the upper M8 bolts.



STEP 5 | Repeat steps 1-4 on the passenger side.



STEP 6 | Double check that all hardware is secure.

Congratulations, installation of the DV8 OE Plus steps is now complete.

