


4-DR ROCK SKINS

21+ JEEP JT GLADIATOR

SRGL-09

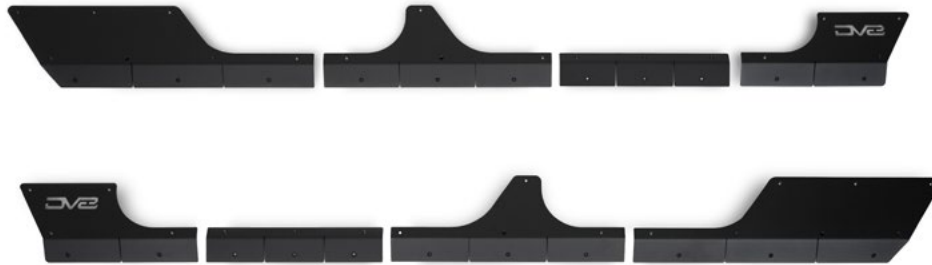

TOOLS REQUIRED

- #3 Allen Bit
- Center Punch Tool
- 9/32" Drill Bit
- Sharpie
- 10, 12mm wrench (If you do not have a nutsert tool)
- HD Double Sided Tape

SKILL LEVEL

- Intermediate
- 1 (you) to 2 persons

Intermediate skill level required, additional assistance required for removal of factory sliders. Assistance recommended for installation of the rock skins.

TIME REQUIRED

- 4 Hours

Time to install this should take about four hours.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

STEP 1 | If you have factory steps or sliders, they will need to be removed prior to install.

Use a 10mm socket to remove the factory nuts securing the slider to the body/pinch weld.

Then, while a friend supports the slider, remove the remaining factory hardware using a 13mm socket.

Remove the slider and set it off to the side. Repeat steps for opposite side of the vehicle.

Note: Assistance is recommended to prevent injury and damage to the product or vehicle.



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (62) M5x12 Nutserts
- (58) M5x16 Allen
- (1) Nutsert Tool



STEP 2 | It is recommended to clean the vehicle of any dirt or debris prior to beginning installation.

Apply HD double sided tape to each of rock skins for initial fitment.



INSTALLATION MANUAL

STEP 3 | Place the rock skins on the vehicle, using the body lines as a guide.

Begin by placing the center most piece first (between the front and rear doors) and work outwards.

While working outwards be sure to keep all the skins even and straight, adjusting any pieces as necessary.



INSTALLATION MANUAL

STEP 4 | Once satisfied with the fitment, hold the skin in place with one hand, while marking the mounting holes with a sharpie.

Repeat this process for all pieces and then remove them to prepare for drilling.

DO NOT LET THE ROCK SKINS SHIFT WHILE MARKING THESE HOLES.

Tip: Work slowly and carefully for the best results!



STEP 5 | With a punch tool, mark the very center of the mounting holes marked in step 4.



INSTALLATION MANUAL

STEP 6 | Drill out the marked mounting holes using a small drill bit, working your way up to a 9/32" bit.



STEP 7 | Install the provided nutserts using a nutsert tool.

If you do not have a nutsert tool, we have provided one with the hardware kit.

For instructions on how to use the provided nutsert tool, scroll to the last page of this manual.



INSTALLATION MANUAL

STEP 8 | Loosely install rock skins using the provided M5 hardware. Do not secure until all hardware is partially threaded.



STEP 9 | Secure the M5 hardware using a #3 allen bit.

While working, check previously tightened hardware often, as it may become slightly loose as you work to tighten the remaining hardware.

Repeat steps for opposite side.



INSTALLATION MANUAL

STEP 10 | Congrats! You are finished with the install of the 20+ Jeep JT Gladiator Rock Skins!



INSTALLATION MANUAL

STEP 11 | To use the nutsert tool, slider the M6 washer and spacer onto the provided M6x50 bolt with the washer going on the bolt first.

Then install a nutsert onto the exposed threads by hand.



STEP 12 | Slide the nutsert tool with the nutsert into the mounting hole.

Ensure the flange of the nutsert is flat against the vehicle prior to tightening.



STEP 13 | Use a 12mm wrench to hold the spacer while tightening with a 10mm socket. Tighten slowly until the nutsert is set properly. Do not over tighten.

Nutsert should be “crushed” against the inside of the trim so that it is tight and secure. When finished remove the nutsert tool using a 10mm socket and repeat as needed.

