

## OE PLUS STEPS

18+ JEEP JL WRANGLER (2-DOOR)

SRJL-10



### TOOLS REQUIRED

- 10mm, 13mm sockets

### SKILL LEVEL

- Novice/Intermediate  
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful

### TIME REQUIRED

- 1.5 Hour

Time to install this should only take about an hour and a half.

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

• Always wear eye protection when operating power tools

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




# INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

## HARDWARE INCLUDED

- (4) M8x25mm Bolts
- (8) M8 Lock Nuts
- (4) M8 Enlarge Washers
- (8) M8 Washers
- (12) M8 Spring Washers



**STEP 1** | Factory steps or sliders, will need to be removed prior to install.

Use a 10mm socket to remove the factory nuts securing the slider to the body/ pinch weld.

With assistance, remove the remaining factory hardware using a 13mm socket.

Remove the slider/step. Repeat steps for opposite side of the vehicle.

**Note:** Assistance is recommended to prevent injury and damage to the product or vehicle.



# INSTALLATION MANUAL

**STEP 2 |** With assistance, lift the steps up to the vehicle and insert the threaded studs on the DV8 steps into the factory holes on the vehicles pinch welds.

If the holes are not large enough, drill them out as necessary. We recommend a 27/64" drill bit.

*Note: Assistance is recommended to prevent injury and damage to the product or vehicle.*



**STEP 3 |** Loosely secure the steps with the provided M8 hardware.

Use (1) lock washer and (1) flat washer per threaded stud.




**STEP 4 |** Once all hardware is loosely installed, secure the DV8 OE Steps in place using a 13mm socket.



# INSTALLATION MANUAL

**STEP 5** | Use a 13mm to secure the main mounting bracket to the body.

Repeat steps for the opposite side of the vehicle.

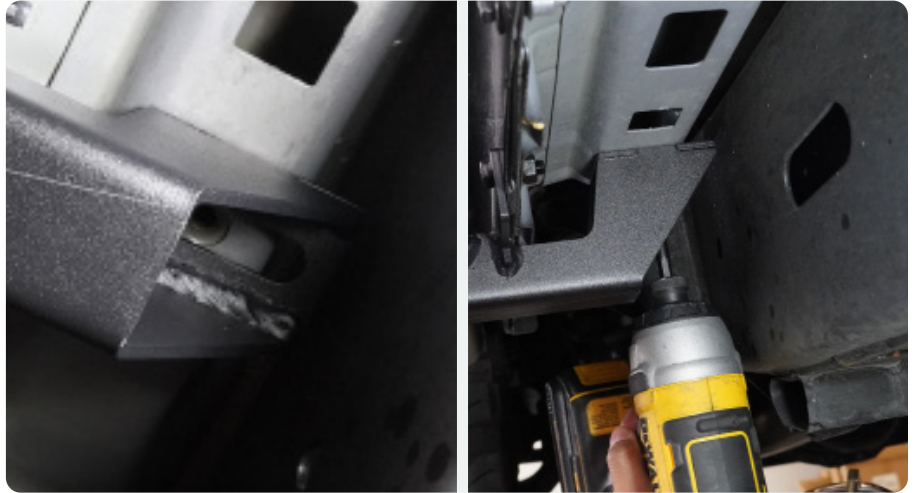

**STEP 6** | Double check fitment and all hardware is secure.

Congratulations! Installation of the DV8 JL OE Plus Steps is now complete.

