

OE PLUS STEPS

2024+ TOYOTA LAND CRUISER

SRTL4-01



TOOLS REQUIRED

- 12mm, 13mm sockets
- Safety Glasses

SKILL LEVEL

- Novice/Intermediate
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1.5 Hours

Time to install this should only take about an hour and a half.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (12) M8x30mm Hex Bolts
- (12) M8 Flat Washers



STEP 1 | Remove the (6) factory rocker panel bolts using a 12mm socket.



INSTALLATION MANUAL

STEP 2 | With assistance, lift the DV8 OE Plus Steps up to the vehicle, aligning the mounting points with the factory threaded hole in the rocker panel.


Use the provided M8 hex bolts to loosely secure the DV8 OE Plus Steps in place.

Use 1 M8 Flat washer per M8 hex bolt.



STEP 3 | With the step loosely mounted, center the step, side to side with the vehicle.

Use a 13mm socket to secure the (6) M8 hex bolts.

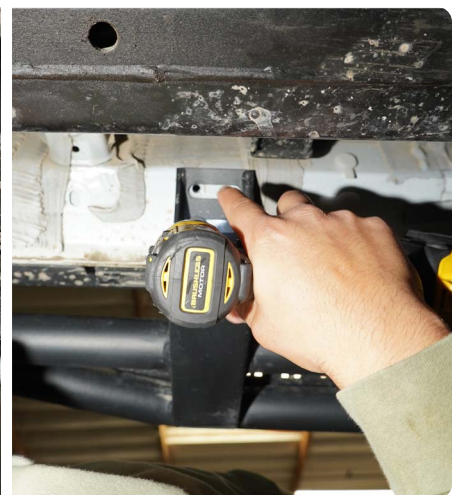



STEP 4 | Repeat steps 1-3 on the passenger side



STEP 5 | Double check that all hardware is secured.

Congratulations, installation of the DV8 Land Cruiser OE Plus steps is now complete.

