

FOOT PEGS (PAIR)

07+/20+ JEEP WRANGLER/GLADIATOR

JK/JL/JT

STJL-05



TOOLS REQUIRED

- #6 Allen Bit
- 17mm Wrench/Socket
- T40, T50 Torx Bit
- Trim Clip Tool

SKILL LEVEL

- Novice/Intermediate
 - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful.

TIME REQUIRED

- .5 Hours
- Time to install this should only take about half an hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover






INSTALLATION MANUAL

STEP 1 | Roll down your windows prior to disconnecting the wiring.

This will make lifting the doors off easier and protect the glass from damage.

Remove the trim panel by pulling towards the rear of the vehicle until it unclips.

Remove the wire connector by rotating the white clip until the connector is no longer locked, and then pull free.

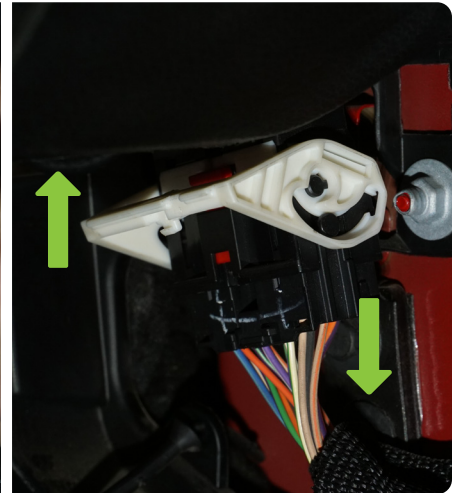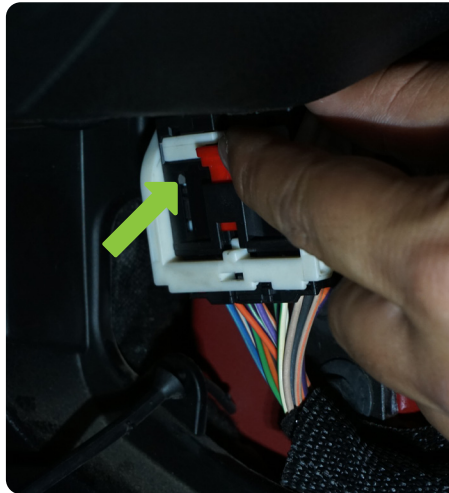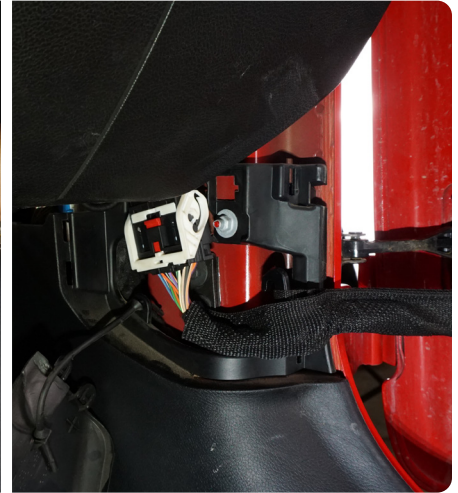

STEP 2 | Now that the wiring harness has been disconnected, lift on the door strap to remove it from the hook.

Using a T40 torx bit, remove the door check.

Note: Take caution not to damage the vehicle as the doors may swing towards the front fender.



INSTALLATION MANUAL

STEP 3 | Use a T50 torx bit to remove the bolts securing the doors to the vehicle. With the assistance of another person, lift the door carefully off the vehicle and set off to the side, being careful not to damage the door or vehicle.



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.



HARDWARE INCLUDED

- (2) M10x70 Allen
- (2) M10 Nylon Nuts
- (4) M10 Flat Washer
- (4) M10 Nylon Spacer



STEP 4 | Place the foot pegs onto the factory door hinge.

Note: If these installed on a 07-18 Wrangler JK, nylon shims are provided to be placed between the door hinge and foot peg on the top and bottom of the hinge.

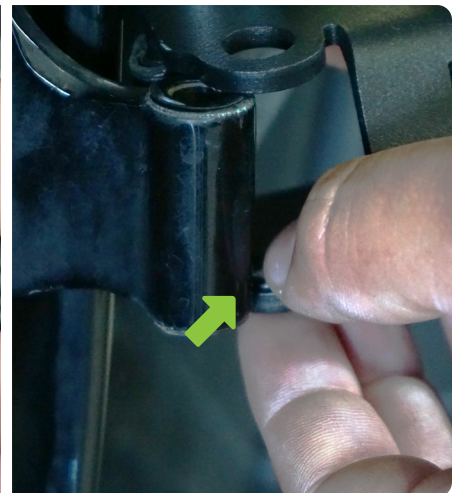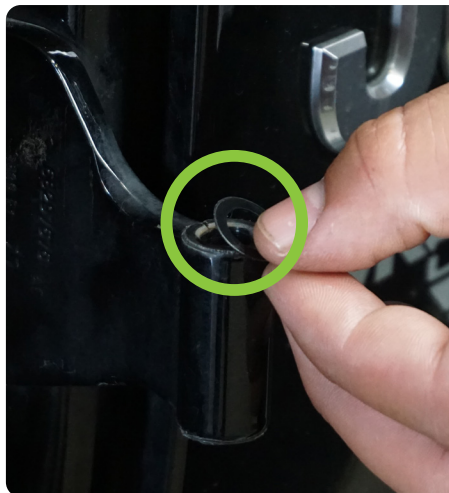

INSTALLATION MANUAL

STEP 5 | Installed the provided M10 hardware and secure with a #6 allen bit and 17mm socket.

Hardware should be tight enough to ensure the foot pegs do not shift during everyday driving, but can be adjusted inwards and outwards if desired.



STEP 6 | Congrats! You are finished with the installed of the 07+/20+ JK/JL/JT Wrangler/ Gladiator DV8 Foot Pegs!

