

4 TO 1 ADAPTER

UNIVERSAL

UNWH-02



TOOLS REQUIRED

- Zip-ties

SKILL LEVEL

- Novice/Intermediate
- 1 (you)

Little skill level required, you can easily install it by yourself.

TIME REQUIRED

- 1 Hour

Time to install this should only take about an hour

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

• Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information


1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

STEP 1 | UNWH-02 is a 4 to 1 plug adapter harness that makes running multiple lights “plug-n-play”.


UNWH-02 will allow you to run (4) LED pod lights, (2) pod lights with a (1) 20” light bar or (2) pod lights with a (1) 13” light bar. (Non-halo pod lights & light bars)

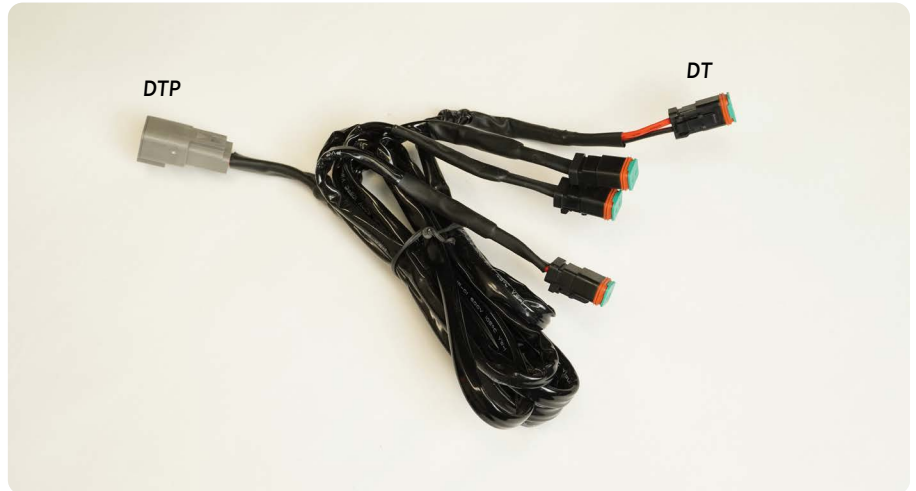

STEP 2 | For this install example we show running 4 pod lights on a DV8 bumper.

Route each of the (4) plugs to each pod light.

Route the DTP female plug towards in the direction of the UNWH-01 wiring harness male DTP plug.

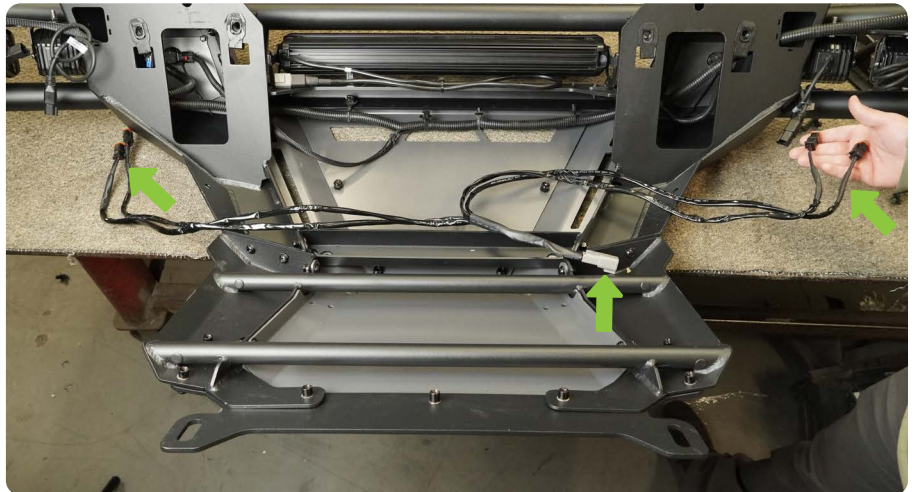

INSTALLATION MANUAL


STEP 3 | Connect each of the (4) plugs as shown, ensuring the electrical plugs are fully clicked together.

Use zip-ties to secure any loose wires.



STEP 4 | With the bumper mounted connect the male & female DTP plugs, ensure the plugs are fully clicked together.

Tuck and use zip-ties to secure any loose wiring.

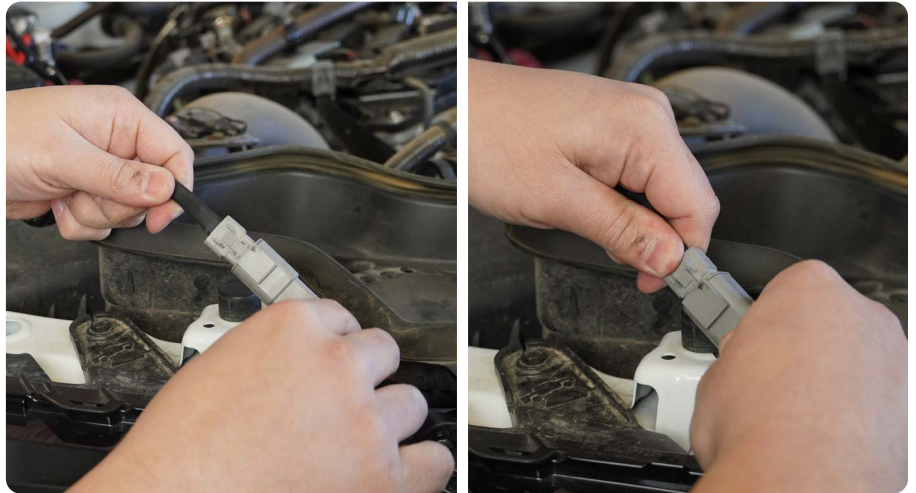

STEP 5 | Double check that all wiring is clear of any rotating or hot engine components.

Congratulations installation of the UNWH-02 is complete.

